

# Air Bath Installation and User Manual

## Attention

Please read all instructions carefully in order to use this product safely and correctly. Please keep this manual for future reference and remember that all electrical connections should be made by a qualified professional.

## Usage Guidance

Before turning the power on to the tub for the first time please make sure that the air-lines and power supply have been properly connected. If the tub will not be in use for long periods of time, disconnect the blower motor from the power source.

## Useful Tips

In order to extend the life of the product, allow more than 30 seconds between powering on and powering off the motor. To prevent circuit failure or product damage, always use compatible voltage. If the product stops working properly, disconnect the unit from the power supply and restart after waiting 5 seconds.

## Electrical Installation

1. The electrical installation is subject to inspection and approval by local authorities. All electrical connections must be made by a licensed electrician. Follow all local codes during installation of this unit.
2. Before beginning installation make sure that electric power is disconnected at the circuit/fuse box.
3. The blower must be located out of reach from the person in the bathtub and fixed in position with screws to prevent movement of the unit.
4. The blower electrical connection is pre-wired; do not remove the blower cover as this will void the warranty.
5. The air distributor must be installed higher than the water level of the tub, in order to prevent water flow into the air blower.

## 120v

Run a separate 120v, 60Hz, 15A G.F.I. (Class A protected) electric circuit from the main fuse box to the junction box. Use a 14 gage three conductor cable (2 wires plus ground) in connections up to 100 feet (30, 4m) from the main fuse box.

## Installation Instructions

1. All connections for your air tub have been made at the factory. Please check all connections upon arrival and prior to installation to ensure that all connections remain secure during and after delivery.
2. Prior to installation, gather the following tools: level, adjustable wrench, thread seal tape, Phillips screwdriver, and scissors.
3. Carefully remove the bathtub from the box.
4. Connect the switch hose to the white, motor inlet.
5. Install tub drain (not included).
6. Move the bathtub to the selected installation site (make sure the desired tub location has sufficient capacity and strength to hold the tub) and place the tub in the correct orientation.
7. Using a level, check the surface of the bathtub to ensure that the tub is sitting level. If the unit is not level adjust the feet as necessary to bring the tub to level in all directions. Be sure and retighten the lock-nut to each foot level.
8. Check all connections for leaks and once satisfied with installation then fill the tub and power on the blower motor.

## Cleaning and Maintenance

Clean the air tub with a mild detergent and soft cloth. Never use detergent containing acetone or ammonia. Be careful not to use a disinfectant containing formaldehyde.

Regularly inspect the power cord, power switch and plug to check for damage.

To extend the life of air tub, do not use continuously for more than 3 hours.

Recommended temperature range for the air tub is 32-37°C/89.6-98.6°F.

## Note:

This bathtub should be installed by a qualified professional, recognizing all local building codes. Children should always have adult supervision when using the bathtub. Turn off power to the tub after each use.

**Attention:** The manufacturer reserves the right to modify products; product design and operation are subject to change without notice